


Fact Sheet 10b

Duraply is a superior structural plywood that can be used in a wide variety of uses, including flooring and other structural elements in the construction of residential and commercial buildings where proven long like performance is needed.

Manufactured from 100% sustainable plantation pine Duraply utilized the veneer preservation treatment method to ensure complete protection from termites and fungal decay (rotting). Veneer treatment is the only way to ensure any unsealed cut panels will not decay.

Veneer treatment method is where the individual sheets of veneer are preservative treated before being fabricated into plywood to ensure 100% penetration. The treated veneers are then bonded with a permanent phenolic resin which is often referred to as “A” bond or Marine “A” or Structural bond.

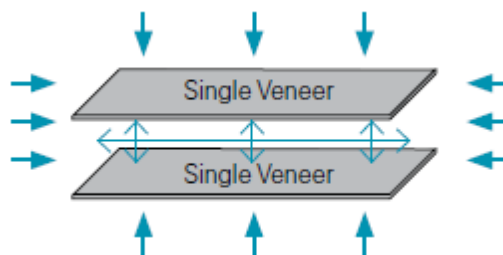

Structural “A” bonds require rigorous testing after submersion in boiling water for 72 hours or 6 hours under high pressure steam to ensure a high quality bond.

Features and Benefits

- 100% Plantation pine
- F14 Stress grade
- Manufacture using hydro-electric power
- Lightweight and easy to install
- Treated to Hazard Class H3 with ACQ
- Long lasting and durable external surface
- Suitable for painting or staining

Specification	
Surface Finish	Sanded face, un-sanded back
Sheet Length	2400mm
Sheet width / cover	1200mm
Sheet Thickness	9,12,15,17,19,21,25mm
Face Back grade	CD
Veneer Species	Plantation pine
Approximate density	580 kg/m ³
Preservative treatment	ACQ H3 by individual veneer
Bond type	“A” Bond (Phenol formaldehyde)
EWPAA Certificate	Yes
Manufacturing standard	AS/NZS 2269 AS/NZS 1604.3

Fact Sheet 10b

Working with ACQ treated plywood

In treated plywood, which has been thoroughly dried the reaction between treatment chemicals and the plywood is believed to be complete, the handling risks are minimal. If the material is being cut, sanded or otherwise machined then dusts are a hazard and personal protective equipment should be worn as with machining untreated plywood.

When working with ACQ treated plywood: -

- **Wear** - Personnel Protective Equipment (PPE) (Cotton or leather gloves, dust mask (Class P1 particulate respirator), dust proof safety glasses
- **Don't** - Burn it, cook with it, se it for animal litter
- **Do** - Wash work clothes separately, dispose of waste in an approved landfill

Whilst the information contained in this document is based on data which, to the best of our knowledge was accurate and reliable at the time of preparation, no responsibility can be accepted by us for error or omissions. The provision of this information should not be construed as a recommendation to use any of our products in violation of any patent rights or in breach of any statute or regulation. Users are advised to make their own determinations as to the suitability of this information in relation to their particular purpose and specific circumstances. Since the information contained in this document may be applied under conditions beyond our control, no responsibility can be accepted by us for any loss or damage caused by any person acting or refraining from action as a result of this information.